



## 0.9 Detail solution Cold roof as bare roof

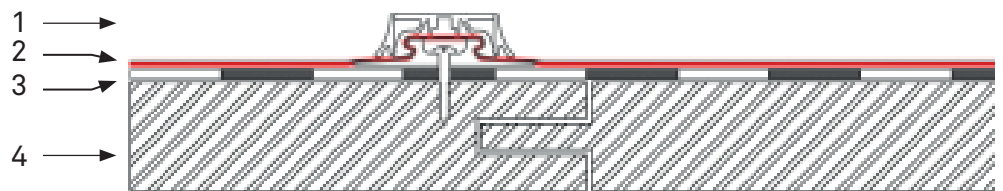

### Legend

1. Contec.fix clamp bracket (arrangement according to wind suction calculation SIA 261 Fastening means according to separate calculation by Contec)
2. Contec.proof EPDM
3. Contec.flex separating layer / fire protection fleece (observe fire protection regulations according to local specifications)
4. Substructure of wood and wood materials

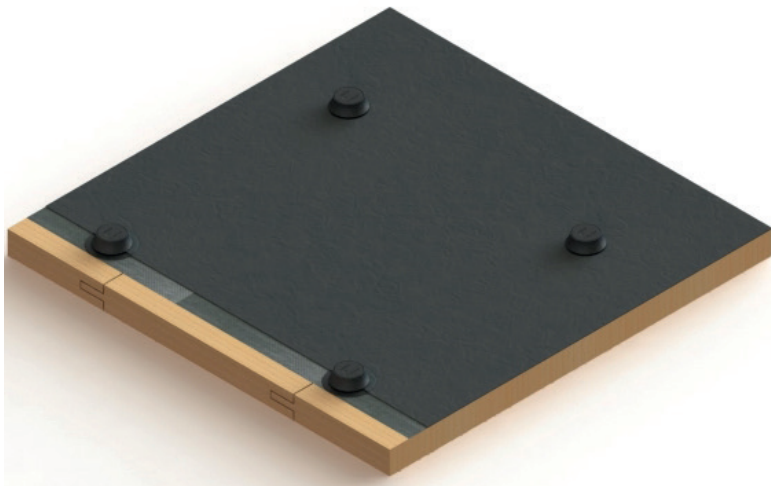